


STEP 1

Unplug the power connection to the luminaire by pulling apart the WAGO connectors.

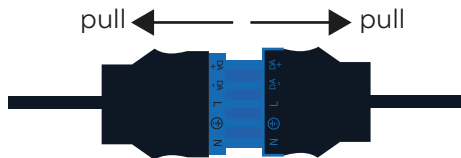

STEP 2

Remove Four PH2 screws on the top side of the luminaire.


Remove cover plates held by the four screws.

Loosen the four Hex 2 screws securing the edge pieces.

Remove edge pieces.

Remove microprismatic cover and diffuser.

Use a large flathead screwdriver to turn the two plastic screws 90 degree anti-clockwise. Remove downlight PCB tray.

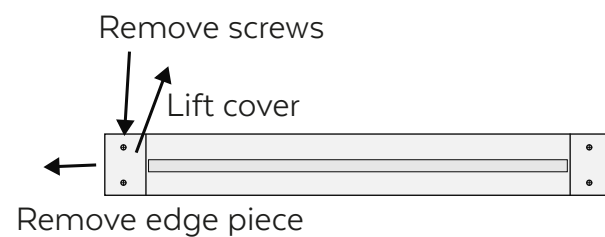

STEP 3

Make sure the LED drivers are disconnected from power supply.

Unplug LED and power cables by pressing down the tabs on the driver. Loosen screws holding drivers.

Remove and recycle drivers.

STEP 4

Remove top side diffuser by pulling it off gently from one side.

Remove both light sources by undoing all screws.

Recycle light sources.

Separate plastics and metals.

Recycle all parts accordingly.

If replacing the light source; De-solder cables from light source if re-using cables, else, replace lightsource and cables and recycle accordingly. Reassemble the luminaire by following this instruction in reverse.