


STEP 1

Unplug the power connection to the luminaire by pulling apart the WAGO connectors.

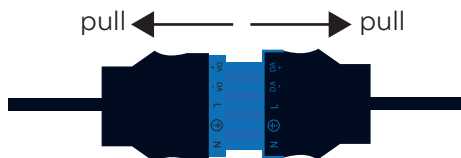

STEP 3

Unscrew the screw(s) on the driver touch protection using a screwdriver with a PH2 head.

Unplug the LED cables by pressing down the cable securing button on the driver.

STEP 4

Unscrew all screws on the back of the luminaire with a suitable bit and a screwdriver.

To remove the metal back plate, gently pull away from the cable opening (see figure). Use gloves as edges might be sharp.

STEP 5


Remove all inner layers inside the luminaire (do not discard if only replacing the light source).

STEP 6

Gently peel off light sources (glued on).

STEP 7

Recycle all parts accordingly.

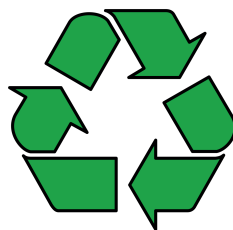

If replacing the light source; De-solder cables from light source if re-using cables, else, replace lightsource and cables and recycle accordingly. Remount the luminaire by following this instruction in reverse.

STEP 2

Take down the luminaire.

